

Model 1600 Series Re-initialization Procedure

5/12/99

Description

The following procedure will completely clear the Terminal's programming and any punch data that may be in memory since the last time the Terminal was polled. In the Terminal's setup parameters, the Baud Rate, Parity, Address etc. will not change. Once this procedure has been performed the Terminal(s) will need to be reprogrammed. This procedure should only be performed at the request of an ADI Support Technician.

STEP 1

Depending on the Model of the CMI 1600 Series Terminal, locate the Use / Test switch, and move the Use / Test switch to the Test position. The Terminal will run a self-test and prompt "Q.C.M." (Quick Check Mode) on the display.

STEP 2

Press the "C" key 4 times until the prompt "RESTART?" is on the Terminal's display. (**Note:** If the C key is pressed more than 4 times, then continue to press it until the above message is on the display).

STEP 3

Press the "E" key 2 times, the prompt on the Terminal will display "RAM CLEARED" for approximately 2 seconds. The Terminal will then run a self-test and the prompt "Q.C.M." will again be on the display.

STEP 4

Move the Use / Test switch back to the Use position. The Terminal will go through another self-test and prompt "LOCKED" on the display.

STEP 5

For Windows Software, open Clock Comm 32. Select the correct Site. Once the Terminal(s) is on-line, click on the Download button. Once the Terminal(s) finish downloading, they will be ready to use. For DOS Software, go into the Clock Control Menu, then to the Clock Maintenance Menu. Select the correct setup and press enter. Once in the Maintenance Menu, select the correct Clock then perform a Set Clock Switches, Load Tables (if needed), Set Date & Time. Escape out and if needed perform a Clock Download. The Terminal is now ready to use. Repeat this procedure for each Terminal that has been Re-initialized.