



cincinnati time systems

Model 2000 LINC Ethernet Module Replacement Instructions

1. Using the key, unlock the Terminal.
2. Find the On / Off switch on the Ethernet Module and move it to the “Off” position (Figure 1).
3. If an optional UPS Battery Module was installed, press the Battery Disconnect button to power down the Terminal (Figure 1).
4. Unplug the Terminal’s Comm / Power cable from the Snap Port connector on the Ethernet Module or optional UPS Battery Module (Figure 1). If an UPS Battery Module is installed, also unplug the Comm / Power cable from the Snap Port connector on the Ethernet Module (Figure 1).
5. Unplug the Network cable from the Ethernet Host connector on the Ethernet Module (Figure 1).
6. Unplug the DC Plug from the Power Pack from the Power connector on the Ethernet Module (Figure 1).
7. Unplug any cables from both the Wand Port and / or RS-485 Net connectors on the Ethernet Module (Figure 1).
8. Remove the Ethernet Module from the Wall Mount Base and install the replacement Ethernet Module.
9. Plug the DC Plug from the Power Pack into the Power connector on the Ethernet Module (Figure 1).
10. Plug the Network cable into the Ethernet Host connector on the Ethernet Module (Figure 1).
11. Plug any cables for the Wand Port and / or RS-485 Net connectors back into the Ethernet Module (Figure 1).
12. Plug the Terminal’s Comm / Power cable into the Snap Port connector on the Ethernet Module or into the Snap Port connector on the UPS Battery Module (Figure 1). If an UPS Battery Module is installed, also plug the Comm / Power cable from the UPS Battery Module to the Snap Port connector on the Ethernet Module (Figure 1).
13. Find the Online / Offline switch on the Ethernet Module and make sure it is in the “Offline” position (Figure 1).
14. Find the On / Off switch on the Ethernet Module and move it to the “On” position (Figure 1).
15. Refer to the original installation instructions that came with the Terminal to reprogram the settings for the Ethernet Module or contact ADI Technical Support Department.
16. Once the Ethernet Module has been reprogrammed, find the Online / Offline switch on the Ethernet Module and make sure it is in the “Online” position (Figure 1).
17. Close and lock the Terminal back into place and test communications with the PC.
18. Return defective Ethernet Module back to ADI.

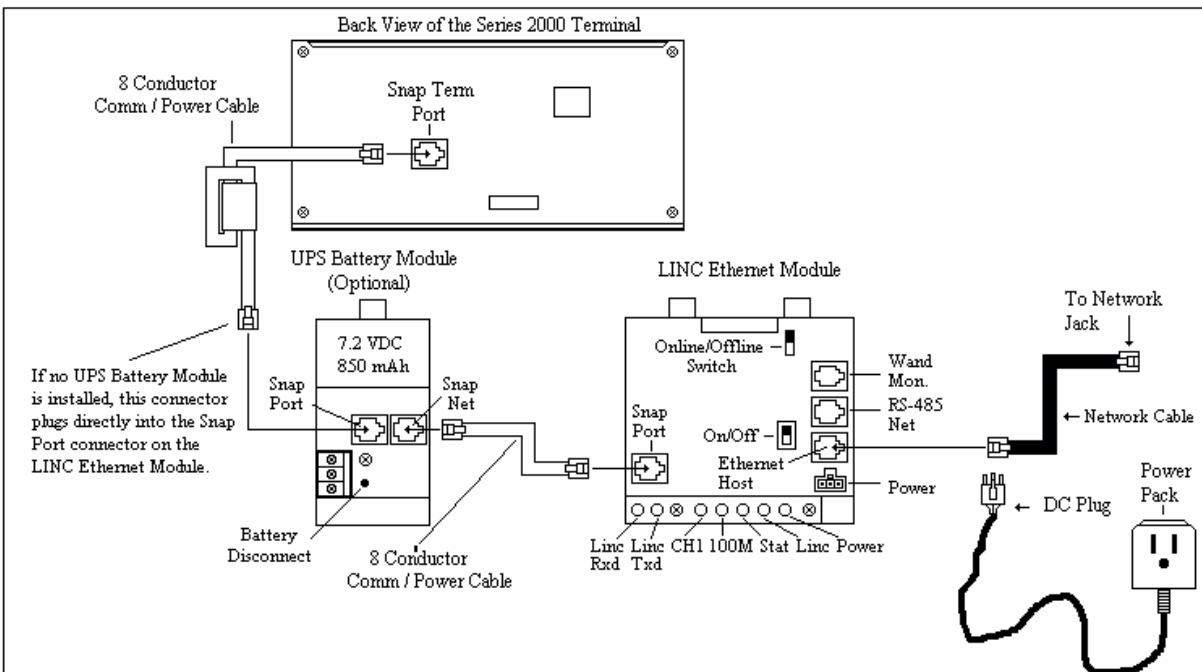


Figure 1