



cincinnati time systems

## Model 2000 UPS Battery Module Replacement Instructions

1. Using the key, unlock the Terminal.
2. Depending on the type of Communication Module (RS-485, Modem or Ethernet), find the On / Off switch and move it to the "Off" position (Figure 1).
3. Press the Battery Disconnect button on the UPS Battery Module to power down the Terminal (Figure 1).
4. Unplug the Terminal's Comm / Power cable from the Snap Port connector on the UPS Battery Module (Figure 1).
5. Unplug the Comm / Power cable from the Snap Net connector on the UPS Battery Module (Figure 1).
6. If applicable, remove any wires connected to the UPS Battery's Relay making note of which wire is connected to which screw terminal on the Relay (Figure 1).
7. Remove the UPS Battery Module from the Wall Mount Base and install the replacement UPS Battery Module.
8. Plug the Comm / Power cable into the Snap Net connector on the UPS Battery Module (Figure 1).
9. Plug the Terminal's Comm / Power cable into the Snap Port connector on the UPS Battery Module (Figure 1).
10. If applicable, reconnect any wires that were connected to the UPS Battery's Relay screw terminals (Figure 1).
11. Depending on the type of Communication Module (RS-485, Modem or Ethernet), find the On / Off switch and move it to the "On" position (Figure 1).
12. Close and lock the Terminal back into place.
13. Test communications with the PC.
14. If applicable, make sure the UPS Battery's Relay is working correctly.
15. Return defective UPS Battery Module back to ADI.

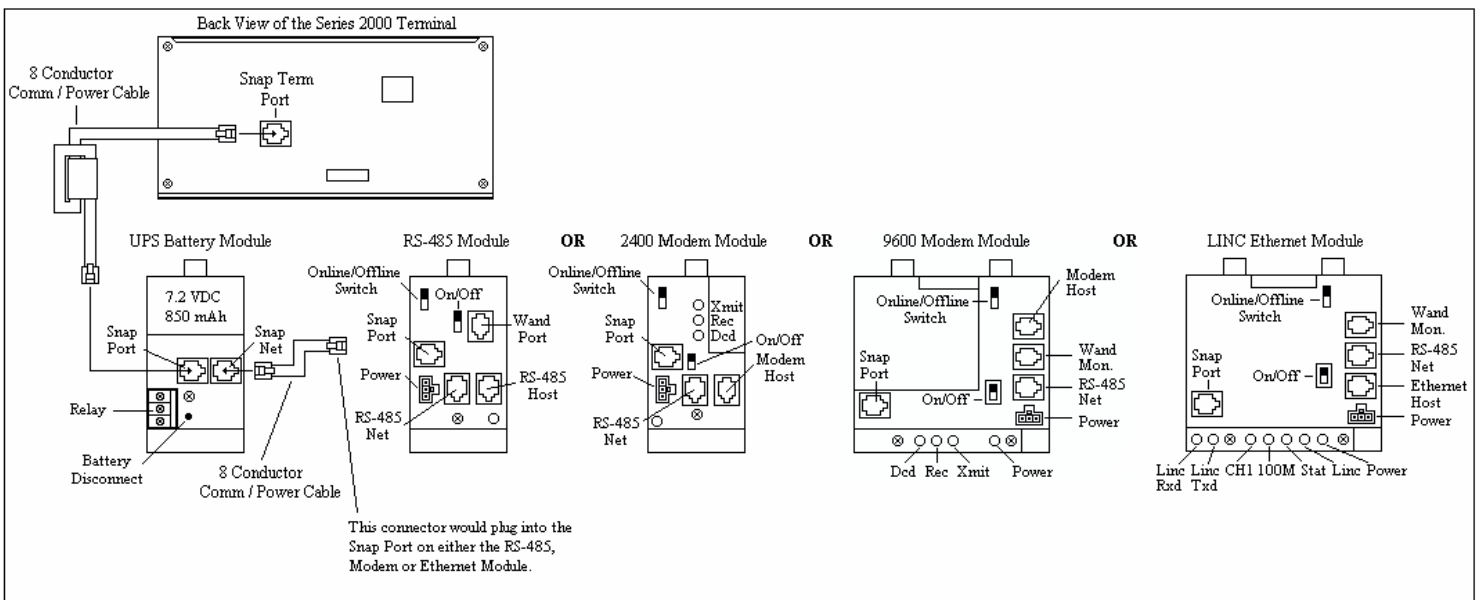


Figure 1