



cincinnati time systems

Instructions to change the communication type to RS232 on the NT5000:

Press the ← twice

Press “888” then “Enter”

Press “8” the display will show “Admin Password”

Press “160419” then “Enter”

Press 2 for “set comm port

Press “4” which is RS232 9600 baud rate

Press “Enter” several times until the display shows the time & date again

Note: You will need to perform these functions within about 5 seconds on each selection or the display will time out and go back toward the normal display one screen at a time.